

## INSTRUCTIONS

### Before using the Tyre Mate

- Push valve through hole in rim. Screw retaining nut half way down valve shank. Insert valve and screw on valve nut.
- Partially inflate inner tube so that it begins to assume a tubular profile.
- Place inner tube in rim, ensuring that the valve remains at right angles to the rim. Avoid folds in inner tube.
- Position tyre over one edge of the wheel rim by hand.

### How to use the Simson Tyre Mate

1. Rotate wheel and push the walls of the tyre towards the centre of the rim, whilst standing over the wheel, looking down on the side of the tyre that still has to be pulled over the rim.
2. Position the Tyre Mate on the edge of the wheel rim (see 2).
3. Hook the hinged arm of the Tyre Mate under the edge of the tyre to be pulled onto the rim (see 3).
4. Pull the Tyre Mate towards you so that part of the tyre is lifted over the wheel rim (see 4).
5. Rotate wheel and repeat above until the tyre is fully seated on the rim (see 5).

